INGLÉS

BLUETOOTH SPEAKER
X3/X3M/X5/X5M
USER MANUAL

CoolBox Audio

OTHER
DEVICES
COOLBOX
AUDIO
AVAILABLES

HEADPHONES
BLUETOOTH H2

Table of contents

1 Introduction 1
2 Kit Contents 1
3 Connection Diagram 2
4 How to use 3
4.1 General function 3
4.2 Pairing to mobile phone 4
4.3 Charging your device 5
5 Technical specification 6
6 Service and Support 7
7 FAQ 7

1.Introduction

Congratulations, and thank you for choosing the Bluetooth Speaker. This manual will help you operate the Bluetooth Speaker, but you should first familiarize yourself with the Bluetooth functionality of your mobile phone or other devices before using the Bluetooth Speaker.

Safety Rules

1\ Please follow the rules depicted in this manual closely to ensure your safety. Before using this Bluetooth speaker, we would strongly encourage you to read through this user manual.
2\ Be more wary of any edges, uneven surfaces, metal parts, accessories and its packaging so as to prevent any possible injury or damage.
3\ Do not modify, repair or dismantle this Bluetooth speaker. Doing so may result in fires, electric shocks, complete breakdown of this Bluetooth speaker, etc. All of which, are not covered under warranty.
4\ Do not use any diluents or volatile liquid to clean the Bluetooth speaker.
5\ Do not use the Bluetooth speaker in a hazardous location.

2.Kit Contents

1X Bluetooth Speaker X3/X3M
1X USB Charger
1X lanyard
1X User Manual

1X Bluetooth Speaker X5/X5M
1X USB Charger
1X User Manual

3.Connection Diagram

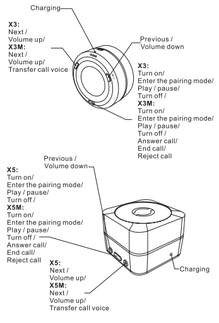

4.How to use

4.1.General Functions

Desired Result	Required Action
Turn on	Press the "▸◂" button for 3 seconds when the device is off. (Blue LED slowly flashes and a tone voice beep)
Enter the pairing mode	Press the "▸◂" button and hold on for 6 seconds.(Blue LED and Red LED quickly flash alternately with two beep tone voice).
Pairing	You should use a Bluetooth function mobile phone or other Bluetooth Master Device and to perform pairing action (detail refer to the chapter about pairing)
Play / pause	Press ▸◂ to play when the device is pausing and press ▸◂ to pause when the device is playing.
Next / Volume up	Short press✦is for volume up and long press✦is for next music.
Previous / Volume down	Short press▸◂is for volume down and long press▸◂is for previous music.
Turn off	Press the "▸◂" button for 3 seconds when the device is on.(a tone voice beep and all LED is off)
Low battery warning	(The LED flash)
Charging	Plug the charger to ⊖⊕⊖ port of the device.(Red LED is on)

Desired Result	Required Action
Answer call(X3M/X5M)	Press the "▸◂" button for 1second while the call coming
End call(X3M/X5M)	Press the "▸◂" button for 1second to end call
Transfer call voice(X3M/X5M)	Press the "+or−" button for 2seconds to transfer the callvoice between the mobile phone and device
Reject call(X3M/X5M)	Press the "▸◂" button for 2seconds to reject call when the call is ringing

4.2.Pairing to Mobile phone or other device

To use your Bluetooth speaker, you must first pair your speaker with a phone or a computer. Once your Bluetooth speaker is paired to a specific mobile phone, they will remain paired and automatically recognize each other whenever they are within range.

Pairing to a phone and Entertainment:

- Turn on your phone and ensure its Bluetooth function is activated
- Turn on the Bluetooth speaker go to the paring mode.
- Search your Bluetooth devices onyour phone by following the phone's instructions. Refer to your phone's user manual for more information.
- After a few second the phone will list the device as a discover device. Select it and follow your phone instruction to select this pairing.
- Then your phone will request a passkey or PIN, enter 0000 as your PIN or passkey.
- Your phone will confirm the pairing, and then press Yes/Ok.
- Finally, select to connect with device from your phone.
- You can play music; watch TV/movie and play game with your phone, then your can hear all the sound or music form the device. Also you can control the player by operating the device. Example, volume up and next music.

Pairing to a computer and Entertainment:

- If there is no Bluetooth function supported by your computer, a Bluetooth adapter is necessary. Fix the adapter with your computer and ensure its Bluetooth function is activated.
- Turn on the device go to the paring mode.
- Open the Bluetooth software (such as BlueSoleil) installed on your computer, and selects "Search your Bluetooth devices" function. Refer to user manual of the Bluetooth software for more information.
- After a few second the " device name" will list in Bluetooth software of your computer as a discover device. Select this icon and click right button of mouse to select "pairing" item, then select "connect with audio device" with same operation.
- Open your media player soft to play music, watch TV/movie and play game, then all the sound will be playback on your device.

4.3.Charging your device

The X3/X3M is convenient to connect to AC charger or a USB charger with Mini DC 2.0 port marked with⊖⊕⊖. Make sure that your device is full charged for at least 6 hours before initial use. Insert one terminal of your charger to AC main or USB port of PC and other terminal to DC 2.0 jack⊖⊕⊖. While charging, the red LED light constantly. When charging is completed, the LED turns off.

Warning:

- You must select a qualified charger from a regular manufacturer.
- You must charge the Bluetooth speaker if it has been not used for more than 12 months.

5.Technical specification

Parameter	Value
Bluetooth Specification	2.1+EDR
Bluetooth Profile	A2DP AVRCP
RF Range	10 m
Frequency Response	100Hz-20KHz(X3/X3M) 120Hz-20KHz(X5/X5M)
Loudspeaker Output	3W
Signal-To-Noise	⩾75dB
Distortion	⩽1.0%
Playback Time	8 hours(X3/X3M) 6 hours(X5/X5M)
Charging Time	3 to 4 hours(X3/X3M) 2 to 3 hours(X5/X5M)
Dimension (L×W×H)	80×80×42mm(X3/X3M) 52×52×38mm(X5/X5M)
Weight	120g(X3/X3M) 190g(X5/X5M)

6.Service and Support

If your device is not performing as it should,please take it to your local service providers or dealer for service.

7.FAQ

1\ Why is there no power even when the Speaker is power on?
Ans: Ensure the battery is being charged up to 6 hours for first time using. The LED is lighted when it starts charging.
2)There is no sound when playback.
Ans: Check the connection between your device with phone or computer, if the connection is not established, please reconnect again. Make sure the speaker device is paired and connected with your target phone or other master device.
3)How can I know the Bluetooth speaker has been fully charged?
Ans: When the indicator LED turns red to green when it is charging, it has been fully charged.

FCC Statement
This equipment complies with Part 15 of FCC RF Rules. Operation is subject to the following two conditions:
1) This device may not cause interference and
2) This device must accept any interference, including interference that may cause undesired operation of the device.
RF warning statement:
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
—Reorient or relocate the receiving antenna.
—Increase the separation between the equipment and receiver.
—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
—Consult the dealer or an experienced radio/TV technician for help.

ESPAÑOL

MANUAL DE USUARIO
ALTAVOCES BLUETOOTH
X3M / X5M

CoolBox Audio

OTROS
DISPOSITIVOS
COOLBOX
AUDIO
DISPONIBLES

AURICULARES
BLUETOOTH H2

Índice de contenidos

1 Introducción 1
2 Contenido del paquete 1
3 Esquema de Conexiones 2
4 Cómo se utiliza 3
4.1 Funciones generales 3
4.2 Vinculación con el teléfono móvil 4
4.3 Cargando tu dispositivo 5
5 Especificaciones técnicas 6
6 Servicio y Soporte 7
7 FAQ 7

1. Introducción

Felicidades y gracias por elegir este sistema de sonido Bluetooth. Este manual le ayudará a utilizar sus altavoces Bluetooth, pero es necesario que se familiarice con las funcionalidades de conexión Bluetooth de su teléfono móvil u otros dispositivos antes de usar este sistema de audio.

Medidas de seguridad

1\ Por favor, siga las normas descritas en este manual para garntizar su seguridad.
2\ Antes de usar este sistema de sonido le recomendamos encarecidamente que lea este manual del usuario.
3\ No modifique, manipule o intente reparar este dispositivo. Si lo hace puede provocar fuego, descargas eléctricas o la ruptura del producto. Cuestiones todas ellas no cubiertas por la garantía del producto.
4\ No use disolvente o líquido volátil para su limpieza.
5\ No utilice sistema Bluetooth en lugares peligrosos.

2. Contenido del paquete

1x Altavoz Bluetooth X3
1x Cable USB para carga
1x Correa
1x Manual del usuario

1x Altavoces Bluetooth X5
1x Cable USB para carga
1x Manual del usuario

3. Esquema de Conexiones

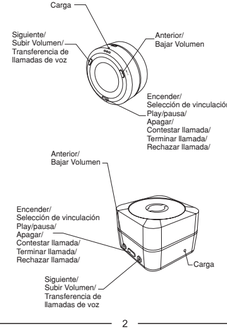

4. Cómo usarlo

4.1 Funciones Generales

Función	Acción requerida
Encender	Pulse el botón ▸◂ durante 3 segundos cuando el dispositivo está apagado. (El led azul parpadeará y sonará un pitido).
Modo de vinculación	Pulse el botón ▸◂ durante 6 segundos. (El led azul y el rojo parpadearán alternativamente y sonarán dos pitidos).
Vinculación	Será necesario utilizar un teléfono móvil con función Bluetooth o cualquier otro dispositivo con Bluetooth y activar su función de vinculación (consultar apartado dedicado a la vinculación).
Play/Pause	Presione ▸◂ para iniciar reproducción cuando esté en pausa y presionar ▸◂ para pausar cuando esté reproduciendo.
Siguiente/ Subir Volumen	Pulsación corta en ✦ para subir el volumen y pulsación larga en ✦ para siguiente canción.
Anterior Bajar Volumen	Pulsación corta en − para bajar el volumen y pulsación larga en − para canción anterior.
Apagar	Pulse el botón ▸◂ durante 3 segundos cuando el dispositivo esté encendido. (Sonará un pitido y el led azul se apagará).
Aviso de nivel de batería bajo	El LED parpadea.
Carga	Conecte el cable cargador al puerto ⊖⊕⊖ del dispositivo. (Se encenderá el LED rojo).

Función	Acción requerida
Contestar llamada	Pulse el botón ▸◂ durante 1 segundo cuando entre una llamada.
Finalizar llamada	Pulse el botón ▸◂ durante 1 segundo para finalizar una llamada.
Transferencia de llamadas de voz	Pulse el botón +or− durante 2 segundos para transferir la llamada entre el teléfono móvil y el dispositivo.
Rechazar llamada	Pulse el botón ▸◂ durante 2 segundos para rechazar la llamada mientras suena.

4.2. Vinculación con teléfono móvil u otros dispositivos

Para usar los altavoces Bluetooth, primero es necesario vincularlos con el teléfono móvil, ordenador o cualquier dispositivo Bluetooth. Una vez que el altavoz Bluetooth se conecta a un teléfono móvil específico, ambos dispositivos se reconocerán y vincularán automáticamente siempre que esté dentro de su radio de alcance.

Vinculación con un teléfono... y a disfrutar

- Encienda su teléfono y asegúrese de que su función Bluetooth está activa.
- Encienda el altavoz y active el modo de sincronización.
- Busque en su teléfono los dispositivos Bluetooth siguiendo las instrucciones del teléfono. (Para más información consulte el manual de usuario de su teléfono).
- Tras unos segundos, el teléfono mostrará los dispositivos detectados. Selecciónelo y siga las instrucciones de su teléfono para activar la sincronización y la conexión.
- Una vez sincronizado y conectado podrá reproducir música,

sonido de películas, juegos o contestar llamadas. También podrá controlar el reproductor del dispositivo (aumentar el volumen cambiar de canción, etc.).

Vinculación con un ordenador... y a disfrutar

- Si su ordenador no dispone de conexión Bluetooth será necesario disponer de un adaptador Bluetooth.
- Conecte el adaptador y asegúrese que la función Bluetooth está activada.
- Encienda el altavoz y active el modo de sincronización.
- Ejecute el software Bluetooth instalado en su equipo y active la función de búsqueda de de dispositivos Bluetooth. (Para más información consulte el manual de su software Bluetooth).
- Tras unos segundos, el teléfono mostrará los dispositivos detectados. Selecciónelo y siga las instrucciones de su teléfono para activar la sincronización y la conexión.
- Una vez sincronizado y conectado podrá reproducir música, sonido de películas, juegos o contestar llamadas.

4.3. Cargando tu dispositivo

Para cargar el sistema de altavoces es conveniente utilizar el cable USB - mini DC 2.0 ⊖⊕⊖ incluido, conectado a un PC, portátil, o cualquier dispositivo con puerto USB (aunque también es posible utilizar un cargador AC adecuado). Asegúrese que el dispositivo se carga por completo (6 horas), antes del primer uso. Durante la carga la luz roja del LED se encenderá, apagándose cuando la carga se completa.

Atención

- Debe seleccionar un cargador certificado de un fabricante de confianza.
- Debe cargar el sistema de altavoces Bluetooth si no se ha utilizado desde hace más de 12 meses.

5. Especificaciones Técnicas

Parámetro	Valor
Especificación Bluetooth	2.1+EDR
Perfil Bluetooth	A2DP AVRCP
Alcance	10 m
Frecuencia de Respuesta	100Hz-20KHz (X3M) 120Hz-20KHz (X5M)
Potencia de salida	3W
Relación señal/ruido	⩾75dB
Distorsión	⩽1,0%
Duración batería	8 horas (X3M) 6 horas (X5M)
Tiempo de Carga	De 3 a 4 horas (X3M) De 2 a 3 horas (X5M)
Dimensiones	89 x 80 x 42 mm (X3M) 52 x 52 x 38 mm (X5M)
Peso	120g (X3M) 190g (X5M)

6. Servicio y Soporte

Si el dispositivo no está funcionando como debería, llévelo a los proveedores locales de servicios o al distribuidor.

7. FAQ

1 ¿Por qué el sistema no funciona, si está encendido?
Respuesta: Asegúrese de que la batería se ha cargado durante 6 horas la primera vez que se utiliza.
El LED se enciende cuando empieza la carga.
2 No hay sonido al reproducir.
Respuesta: Compruebe la conexión entre el dispositivo y el teléfono o el ordenador, si la conexión no se estableció conéctelo de nuevo. Asegúrese de que el sistema está vinculado y conectado al emisor, teléfono, ordenador, etc.
3 ¿Cómo sé si la batería está totalmente cargada?
Respuesta: Cuando el indicador LED se vuelve de rojo a azul la batería se ha cargado completamente.

Certificado FCC
Este equipo cumple con el apartado 15 de las normas FCC.
Funcionamiento sujeto a las siguientes dos condiciones:
1) Este dispositivo no puede ocasionar interferencias
2) Este dispositivo debe aceptar cualquier interferencia, incluyendo la interferencia que pueda causar un funcionamiento no deseado del dispositivo.
RF warning declaración:
El dispositivo ha sido evaluado para cumplir los requisitos generales de exposición RF. El dispositivo se puede utilizar en condiciones de exposición portátil sin restricciones.
Nota: Este equipo ha sido probado y cumple con los límites para un dispositivo digital de Clase B, según el apartado 15 de las normas FCC. Los límites están diseñados para proporcionar una protección razonable contra las interferencias perjudiciales en una instalación doméstica. Este equipo genera, utiliza y puede irradiar energía de radiofrecuencia y, si no se instala y utiliza de acuerdo con las instrucciones, puede causar interferencias en la recepción de radio o televisión, lo cual puede ocurrir al conectar el equipo, para tratar de corregir la interferencia se recomienda al usuario adoptar una de las siguientes medidas:
- Reorientar o reubicar la antena receptora.
- Aumentar la separación entre el equipo y el receptor.
- Conectar el equipo a un toma corriente diferente a la cual está conectado el receptor.
- Consulte al distribuidor o un técnico de radio/televisión para obtener más ayuda.